




1. Connect Hardware





2. Join CampPro network

WiFi-CAMP PRO™ 3

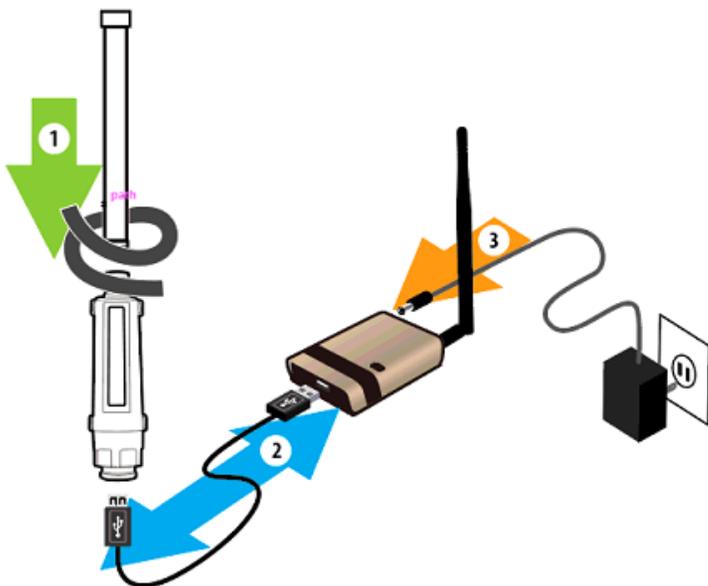

WiFi-CAMP PRO™ 3 Mini

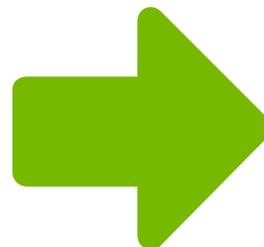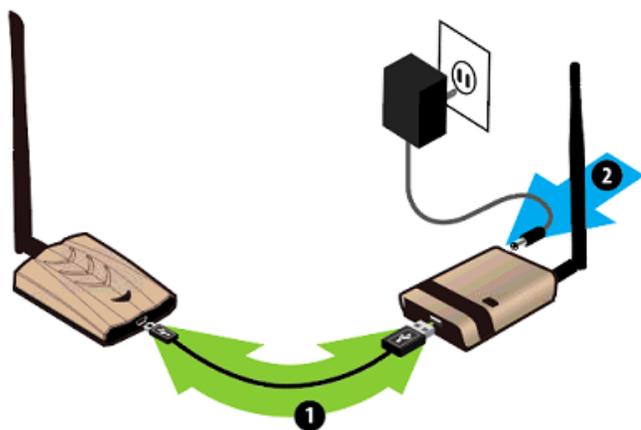



Join Wi-Fi network
CampPro-#####



Mobile/Tablet



Windows 10/11

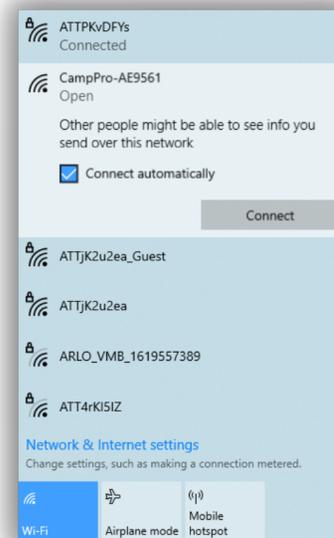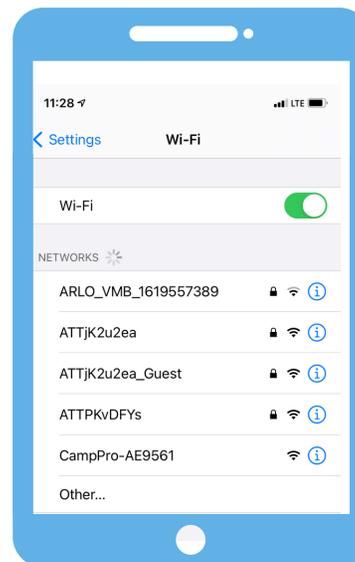



3. Open Setup Page




Mobile/Tablet- Scan QR code



Windows 10/11

Open browser Chrome, Safari, or Edge, type **192.168.36.1**
Press enter

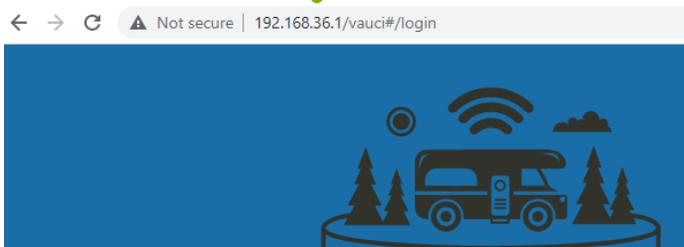


4. Create Password



Create a password to protect your system. **You will need this password again so remember it.**

 5. Browse Tutorial


A popup tutorial will appear showing final steps. Click the right arrow to get to end of wizard.

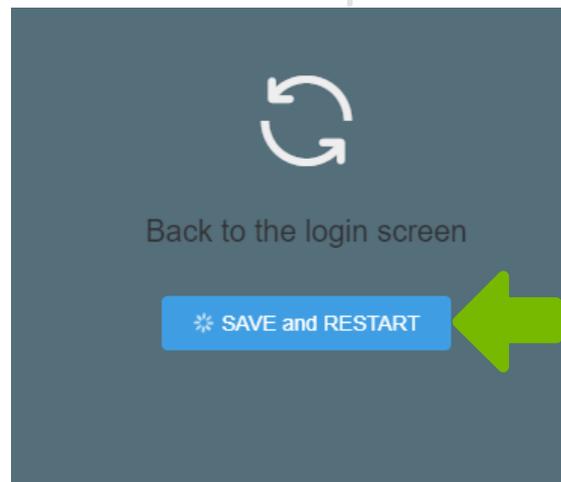 6. Save & Restart

Click Save and Restart. Wait 30 seconds for system to be back online, then reconnect to CampPro WiFi.




Reconnect to Wi-Fi network **CampPro-#####** and enter password

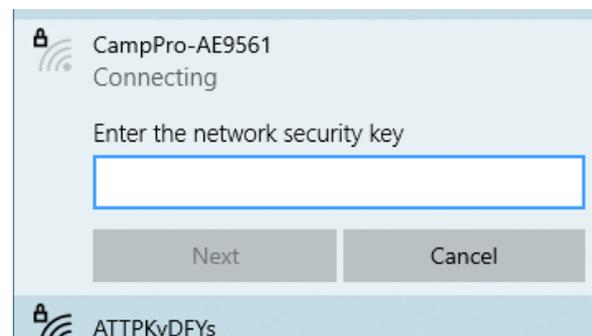


7. Reload & Scan

If your setup window is gone,
Open browser Chrome, Safari, or Edge,
type **192.168.36.1** and press enter

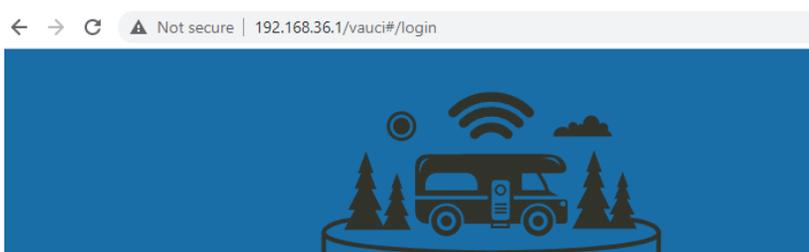


Click the campground WiFi signal to
extend:

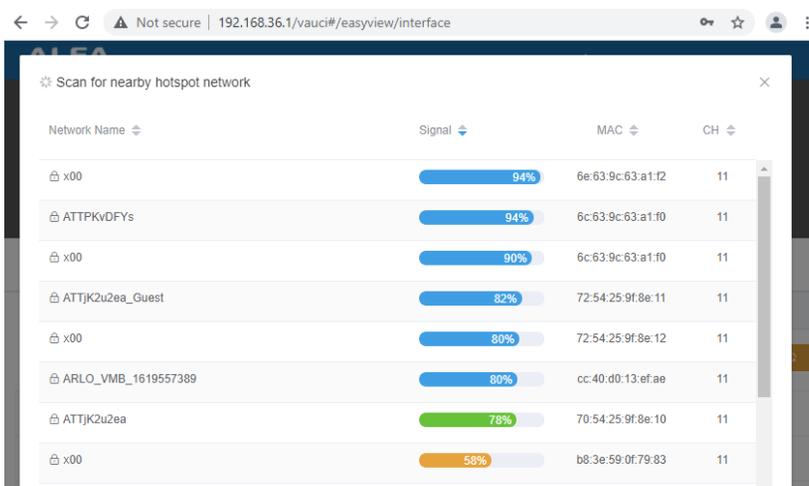

8. Finish Connecting

Enter the password the campground gave you
for their WiFi network:

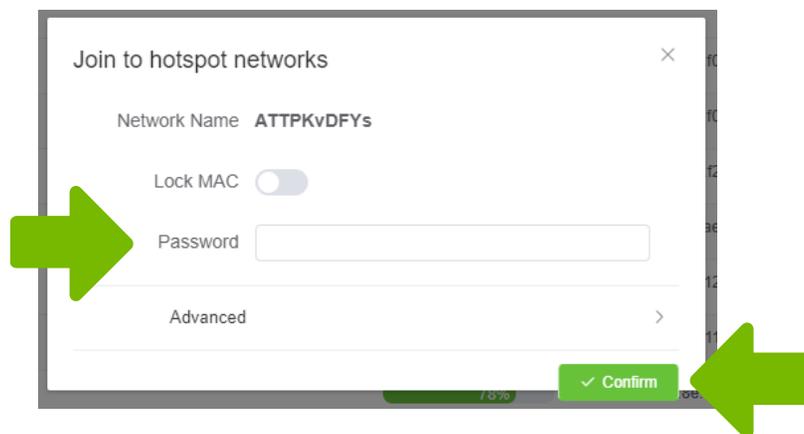

You have successfully finished

